Installation Instruction for Under-mount Sink

Tools and Materials

□ Tape Measure
□ Safety Glasses
□ Saw
□ Construction Adhesive
□ Screw Driver
□ Gloves
□ Pencil




Attention Installer

□ Due to the nature of under-mount installations, we recommend that under-mount sink installations be performed by trained and experienced installers.
□ Sink edge may be sharp; handle with caution.
□ Clean the sink surface with a soft towel to prevent scratch products.
□ Inspect sink for damage prior to beginning installation.
□ This template is only a guide. Actual sink should be present to ensure prefect cut out.

Installing Sink


1. Cutting out Countertop

Ensure sufficient clearance for faucet installation

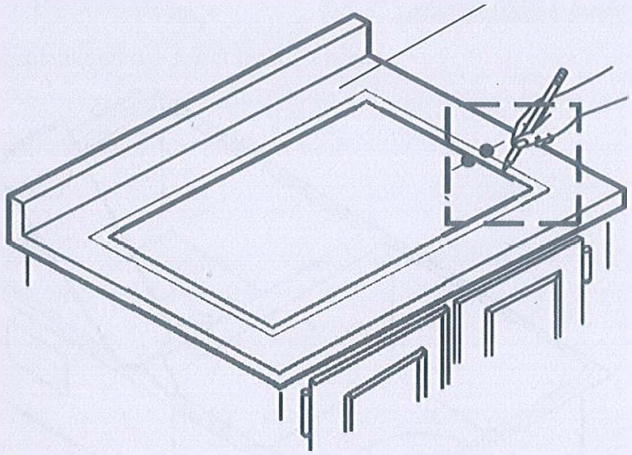


□ Ensure sufficient clearance for faucet installation, position with provided template on countertop. Locate the template front to rear, so that sink will not interfere with the cabinet.
□ Trace a line around the template. Cut along the inside of this line to provide opening.

2. Cleaning up

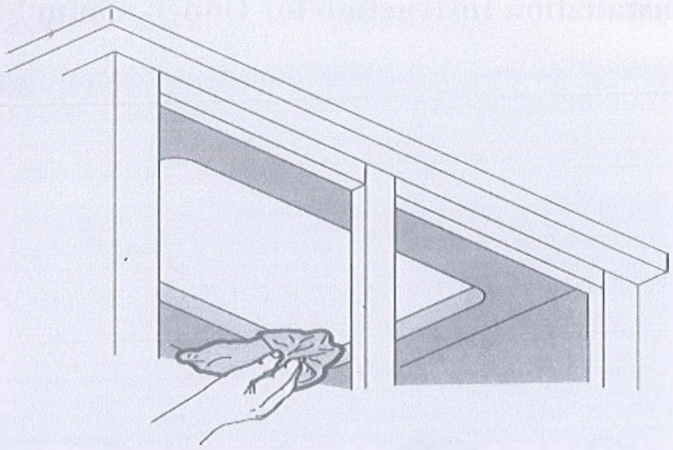


□ Clean the top and underside of the counter and the rim of the sink.

3. Pre-drill Holes

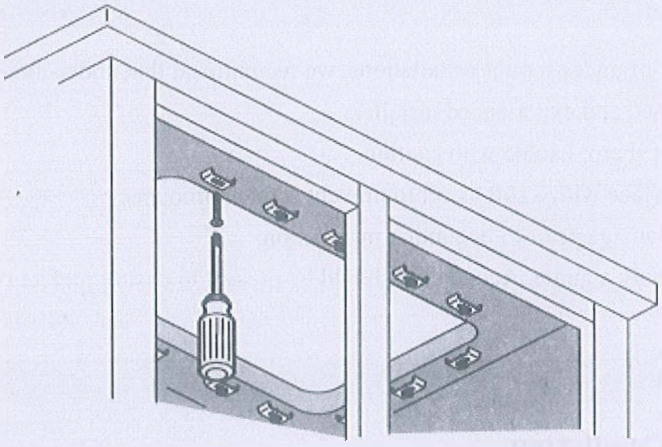

□ Determine placement of clip brackets as indicated by template. Pre-drill holes according to method desired based on countertop material.


4. Apply Sealant

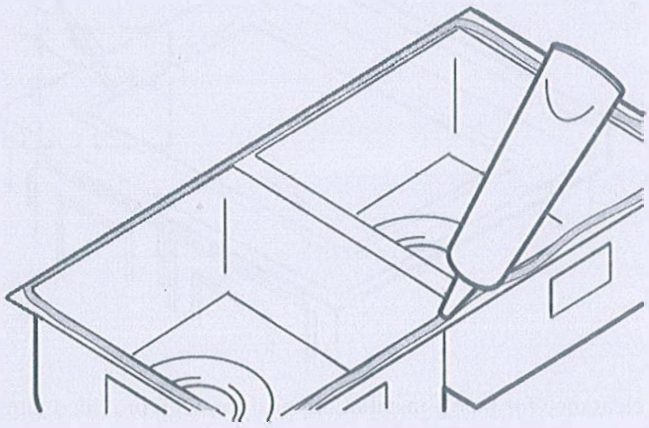

□ Apply a bead of silicon evenly along edge on underside of countertop.


□ Position and align sink over opening. Press sink onto Silicon seal.

5. Tighten Clip Brackets

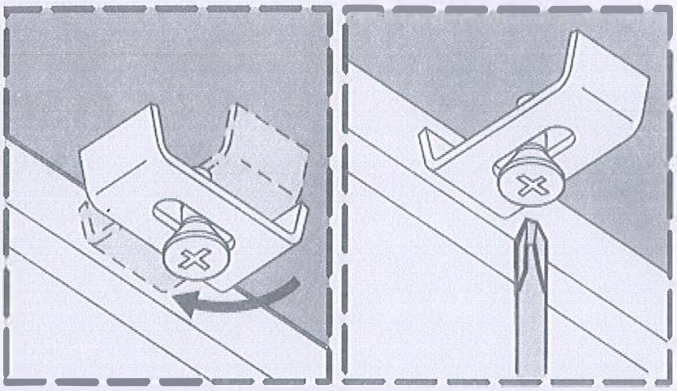


□ After re-checking alignment, install the clips to the countertop, ensure each clip engages the rim. Tighten evenly.

6. Removing Excess Silicon

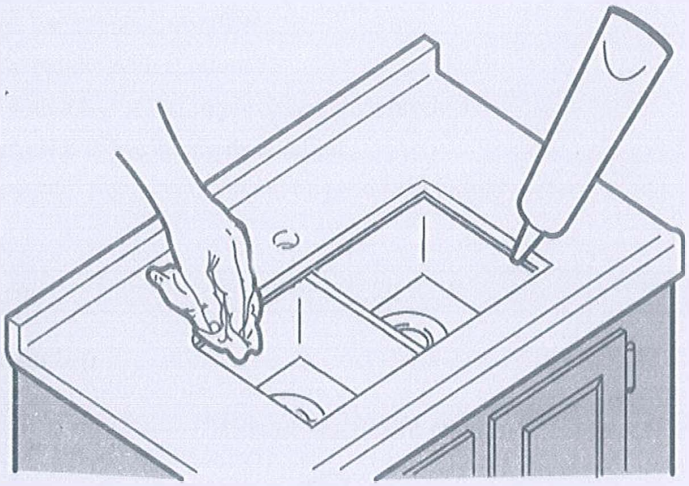

□ Remove excess sealant and dry for at least 24 hours.

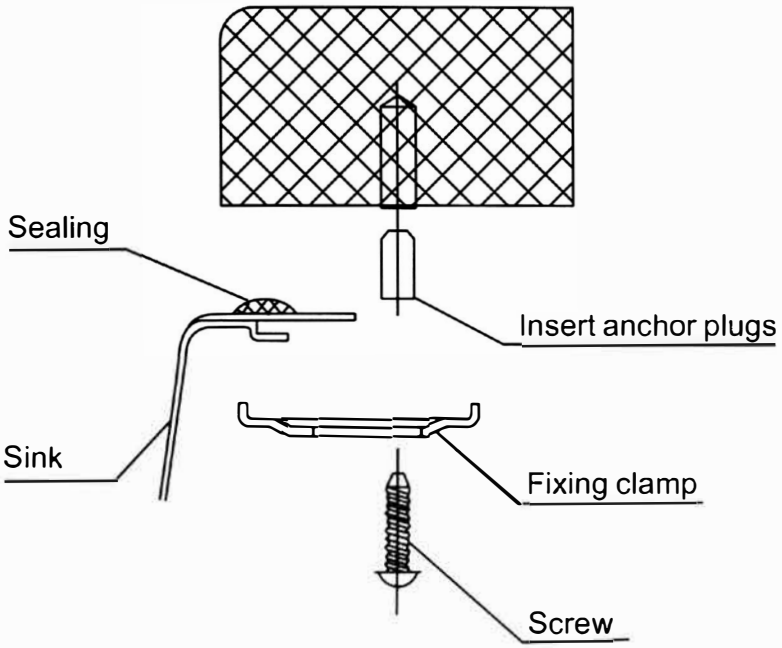

UNDERMOUNT INSTALLATION INSTRUCTION

This sink is specifically designed to be under-mounted in a solid surface countertop only.

CAUTION: Sink edge may be sharp; handle with caution. Do not install a damaged sink - inspect carefully.

1. Cut out countertop using this template.
2. Detetmine placement of clip brackets as indicated by template. Pre-dnll holes according to method desired based on countertop material.
3. Apply a bead of Silicon evenly along edge on underside of cuntertop.
4. Position and align sink over opening. Press sink onto Silicon seal.
5. After re-checking alignment. tighten clip brackets against sink edge.
6. Remove excess Silicon.

NOTE: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

HINT: After Silicon cures. wipe inside edge with dentured alcohol. This will smooth out any rough areas.

THIS PAGE IS NOT THE TEMPLATE.

ACTUAL SINK CUTOUT DIMENSIONS: 30.25" w (left to right) X 16.625" d (front to back)